


ELEVATE YOUR SPACE WITH  
**PREMIUM  
CLADDING**

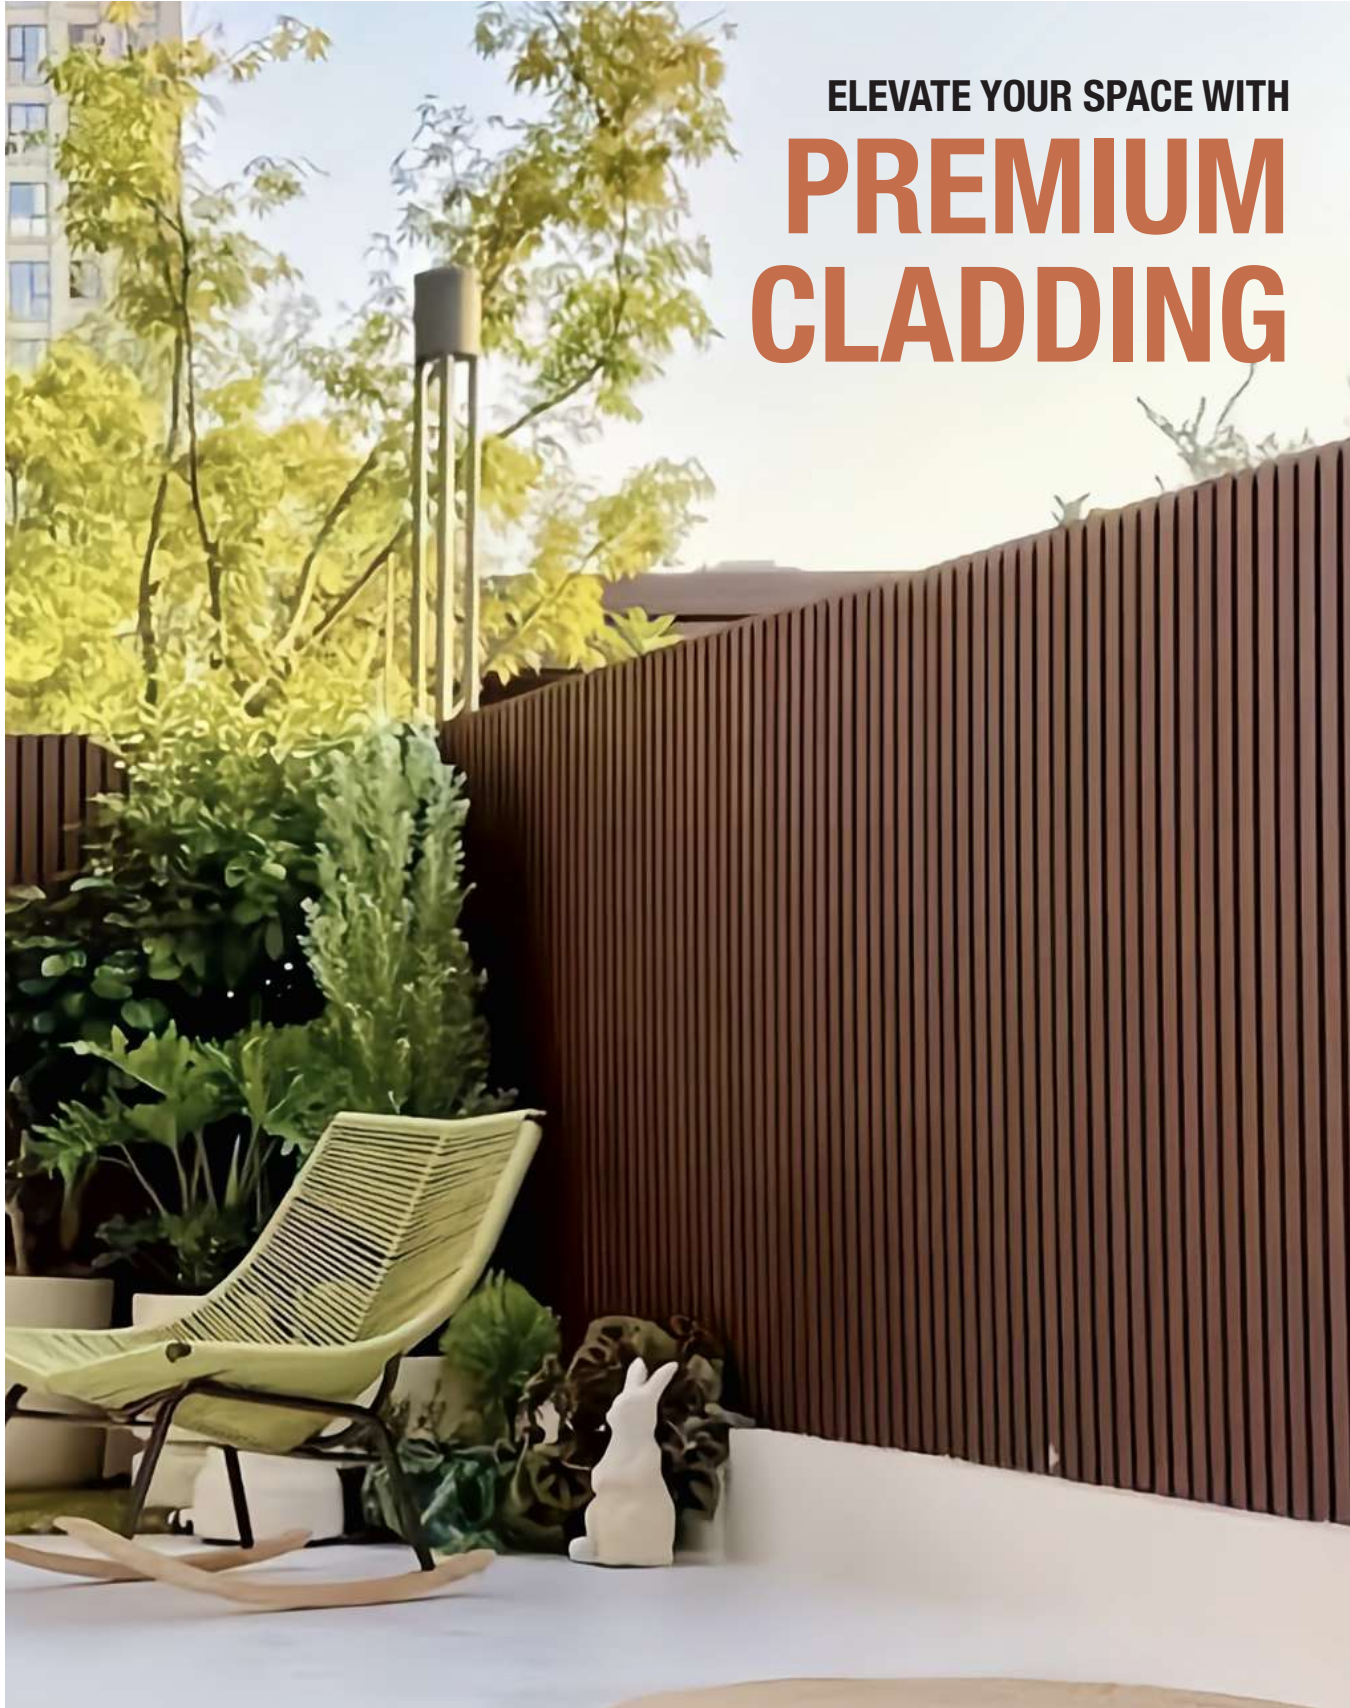

1300 481 664

WWW.BRITEDECKING.COM.AU



LOW MAINTENANCE



DURABLE



FIRE TESTED



WATERPROOF



TERMITE RESISTANT



10-YEAR WARRANTY

# AVAILABLE IN STUNNING COLOURS

FRENCH OAK



COUNTRY TEAK



KOHU MERBAU




SHADOW GREY




BLACK WOOD



CLOUD WHITE

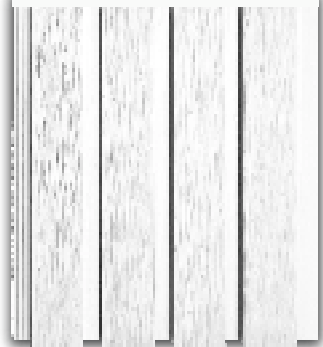


CLOUD GREY

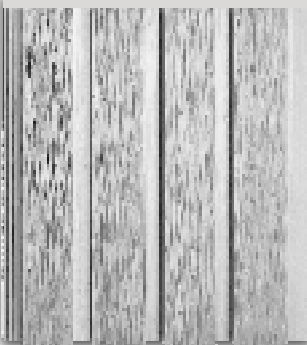

MIDNIGHT TEAK  
DUAL COLOUR




MIDNIGHT WHITE  
DUAL COLOUR

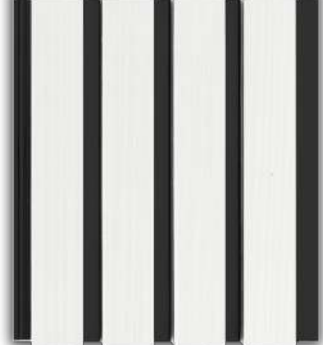


## TRIM SYSTEM

Cladding trim systems are designed to seamlessly blend with your cladding material, creating a clean and polished appearance. They cover the edges and joints of cladding panels, providing a neat and uniform look while also safeguarding against moisture infiltration and air leakage.


STARTER TRIM

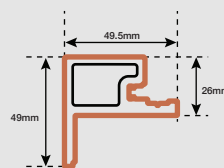

CROSSROAD TRIM

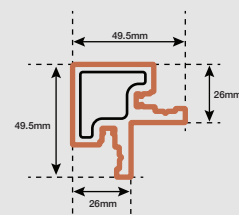

ANGLE TRIM

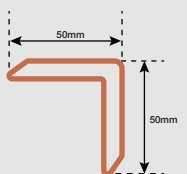

CLADDING TEST CERTIFICATES







Engineered for the harsh Australian climate, our low-maintenance composite cladding resists warping, twisting, and degradation. Made from recycled materials, it has been rigorously fire-tested and offers outstanding resistance to termites and water—providing long-lasting protection for your property. Enjoy the perfect balance of durability and style, backed by a 10-year warranty.

## SPECIFICATIONS


VISIBLE WIDTH	THICKNESS	SPAN	LENGTH	BOARD WEIGHT	WEIGHT PER SQM
200mm	26mm	400 - 500mm	5400mm	15.5kg	14.5kg

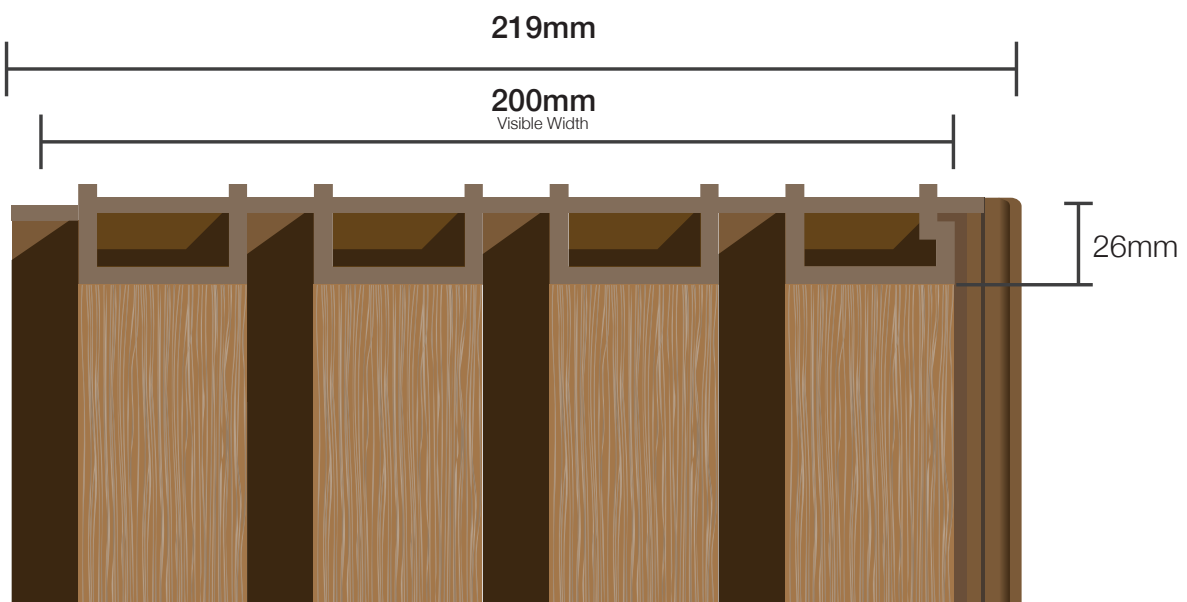


# CLADDING INSTALLATION GUIDE

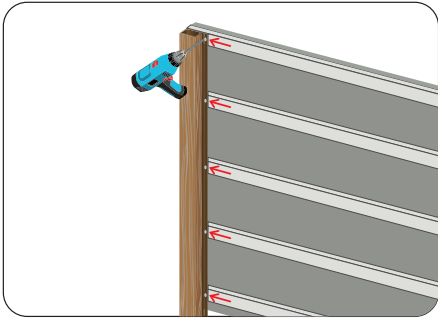


**1** Secure the Starter Trim onto the batten using screws.

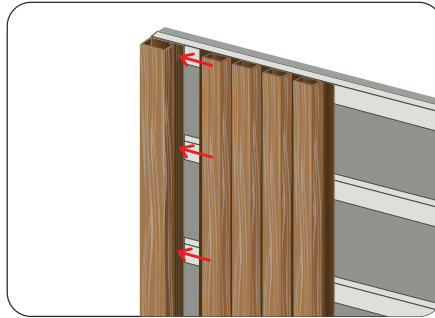


**2** Begin by placing the first cladding board into the trim.

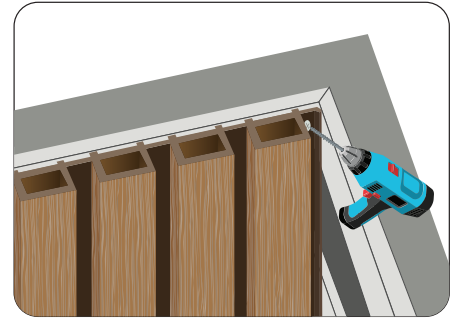


**3** Measure and mark the required width of the final cladding board at the inside corner.

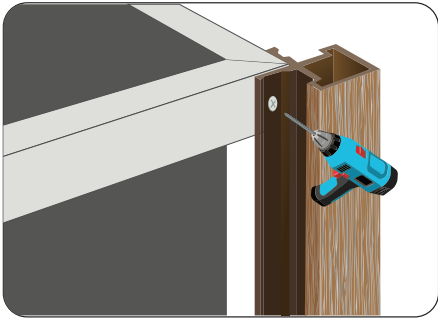


**4** Attach Crossroad Trim to the corner batten using screws.

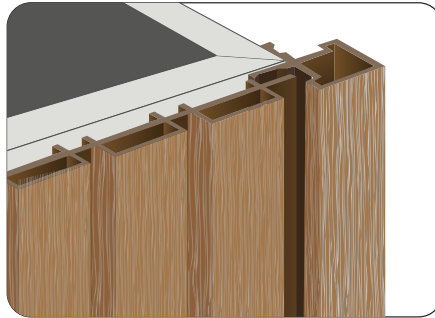

**5** Install the next cladding board by fitting it securely over the previous board.

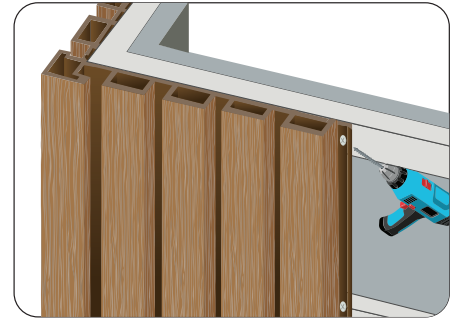


**6** Insert the first cladding board into Crossroad Trim and secure it to the batten with screws.

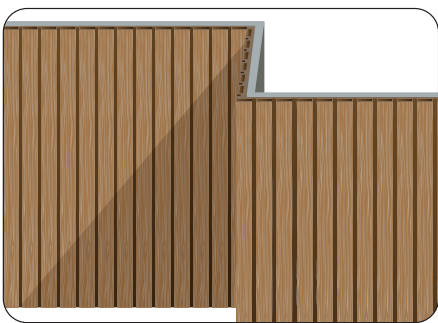

**7** Once installation is complete, inspect the cladding to ensure a clean, high-quality finish.

## FIXTURES REQUIRED

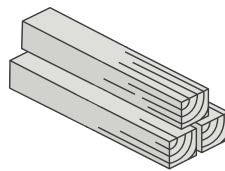

Suitable Battens / Joist



**25mm Screws**  
(Not included on your order)

