



Brite Acoustic Wall Panel Installation Guide




Step 1: Clean the wall and measure the installation area

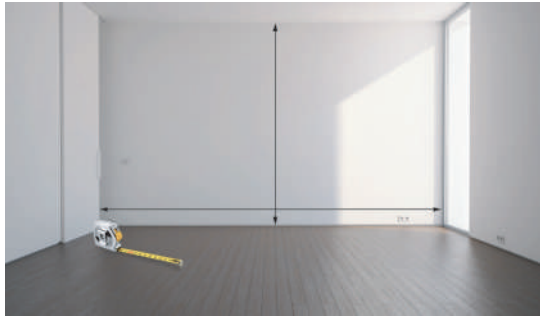

Step 2: Cut the MDF acoustic panel to the required height using an electric circular saw

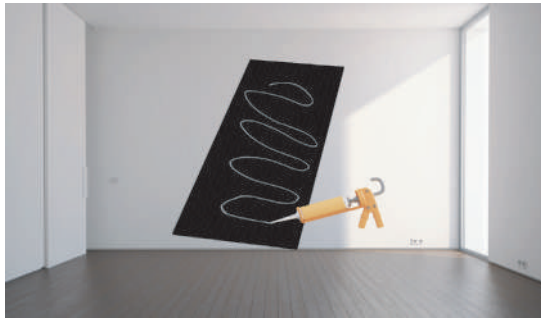

Step 3: Apply adhesive evenly to the back of the panel

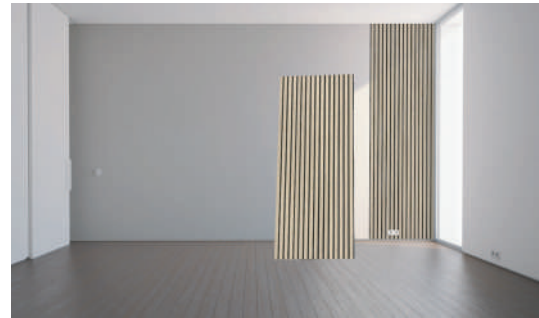

Step 4: Press the panel firmly onto the wall for a secure bond



Step 5: Fasten with screws every 60cm along the panel height



Step 6: Complete the installation with your preferred layout

