


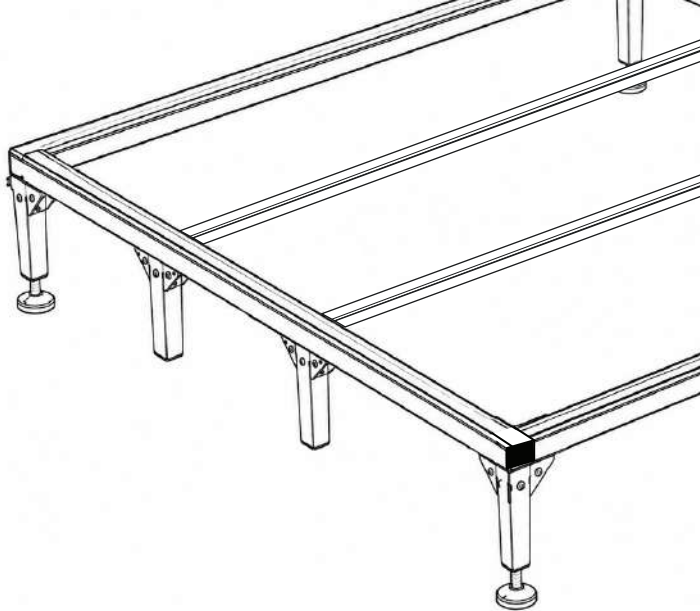

BRITEGRID

MODULAR DECK FRAME

FASCIA KIT **INSTALLATION GUIDE**

FOR HIGH-PROFILE LEG KIT 3 (HP3)

WHAT'S INCLUDED



F3

Fascia Tube
150 mm

2 pcs



FS

Fascia Screw
38 mm

20 pcs




TL

Triangular
Clip

4 pcs


FASCIA KIT ASSEMBLY

- Insert one Fascia Tube (F3) at each of the two indicated centre-rail positions, ensuring the top of each tube sits flush with the top edge of the frame.

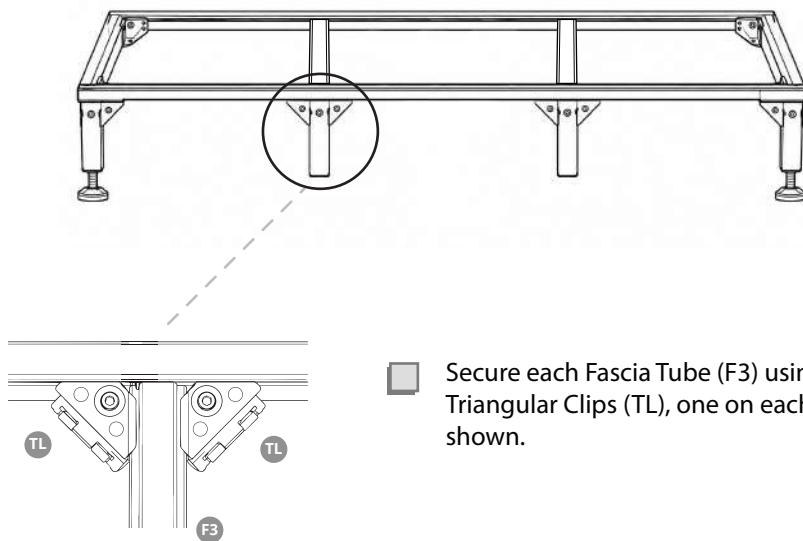

- Secure each Fascia Tube (F3) using two Triangular Clips (TL), one on each side, as shown.

- Fix the fascia board to the frame using the supplied Fascia Screws (FS), 2 at each leg and 2 at each support. Pre-drill the fascia boards, and ensure the screws are fixed only to the metal frame.

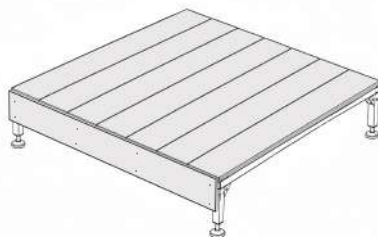

NOTE: All diagrams, dimensions, and illustrations in this guide are indicative only and not drawn to scale. Actual component lengths, measurements, and proportions may vary from those depicted. Refer to the product specification sheet for precise dimensions.